

## **Computer Desk (or Fax/Printer Stand)**

1930 1931 1934

an LDI Spaces Company Minneapolis, MN 55428 www.safcoproducts.com


## ASSEMBLY INSTRUCTIONS

**TOOLS REQUIRED: Phillips Screwdriver** 


## PRODUCT WARRANTY REGISTRATION is available online at: www.safcoproducts.com

		PARTS LIST		
CODE	DESCI	RIPTION	QTY.	PART NO.
Α	Modesty Pan	el: 1930	1	193004
		1931	1	193104
		1934	1	193404
В	Left Leg		1	193002
©	Right Leg		1	193003
© D E	Screw		8	193024
E	Shelf:	1930	1	193005
		1931	1	193105
		1934	1	193405
F	Top Panel:	1930	1	193001
		1931	1	193101
		1934	1	193401
G	Carriage Bolt	t	4	193022
$\bigcirc$	Barrel Nut		4	193023
	Glide		4	193027
HARD	WARE PACK:	193019		
<b>D</b>		G $$	<b>(</b>	\
U			w	_
	Screw	Carriage Bolt		Barrel Nut
	OOLGW	Januage Doll		שמווטוושענ


Attach the A Modesty Panel to the B Left Leg and the C Right Leg with two D Screws per side.

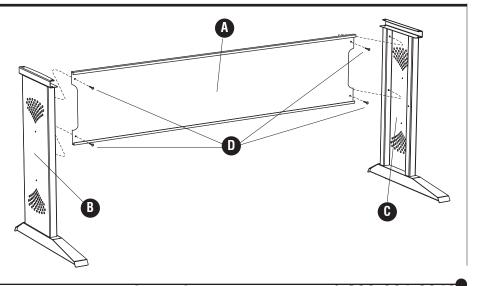

Insert a D Screw in the hole at the inside front of each Leg, but do not tighten completely; leave about 1/16" gap. Place the E Shelf between the Legs, with the back flange resting in the bottom flange of the Modesty Panel, and guide the slots at the sides of the Shelf behind the Screws. Fasten Shelf to lower corners of the Modesty Panel with two additional Screws. Now tighten the front Screws.

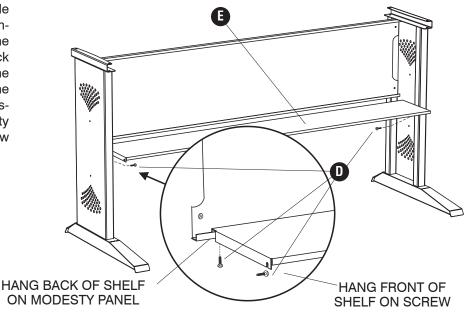

The F Top Panel can be mounted with either side up; select the side you prefer, and slide it into the top channels of the Legs (the cord cutout should be facing toward the back). Insert a G Carriage Bolt (with the square neck) into each square hole in the Legs, through the Top Panel, and fasten with a H Barrel Nut.

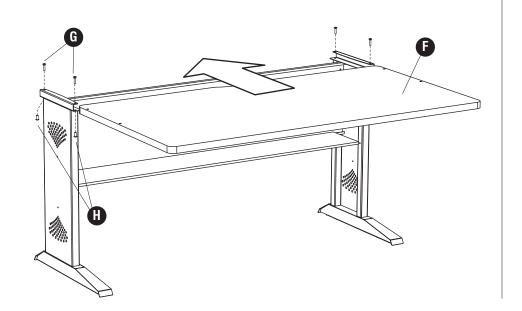

Carefully lay the unit on its back. Screw a I Glide into the front and back hole of each Leg. Set the unit upright. Adjust Glides to make unit level.

## ATTENTION:

Please CENTER load over Legs at rear of unit. Do NOT place heavy loads at front.

